

Dink + Drop Pro – User Manual

Your Ultimate Training Partner for the Short Game

Table of Contents

1. Safety Information
 2. Getting Started
 3. Charging and Battery Guidelines
 4. Setup Instructions
 5. Operation & Controls
 6. Drill Modes
 7. Maintenance & Care
 8. Troubleshooting
 9. Technical Specifications
 10. Contact & Social Media
-

1. Safety Information

- **ALWAYS** fully charge the battery before first use.
 - **NEVER** allow the battery to drop below **20%** to ensure long-term battery health.
 - **IMMEDIATELY STOP** the machine if a ball or any foreign object enters the launch opening.
 - **DO NOT** use dirty, wet, or cracked pickleballs in the machine as this can damage internal components.
 - Use only original parts and tools included with the Dink + Drop Pro.
-

2. Getting Started

Welcome to your Dink + Drop Pro! Weighing only **17 lbs**, this compact yet powerful machine is designed to elevate your dink game and short-court skills.

What's in the Box:

- Dink + Drop Pro Machine
 - 11-Button Remote Control
 - Agitator Attachment
 - Mounting Tool
 - Charging Adapter
 - Quick Start Guide
-

3. Charging and Battery Guidelines

- **Before First Use:** Fully charge the battery using the provided charger.
 - **Battery Life:** 5–8 hours on a full charge.
 - **Important:** Never allow the battery to drop below **20%**. Recharge after every use for optimal battery health.
-

4. Setup Instructions

1. **Attach the Agitator** using the included tool. This ensures smooth ball feeding.
 2. **Load Up to 45 Pickleballs** into the hopper. Use only clean, undamaged balls.
 3. **Power On** the unit using the main power switch.
 4. **Download & Open the Mobile App** on your phone. Initiate your desired drill setting from the app.
-

5. Operation & Controls

- **Control via App:** Begin drills through the Dink + Drop Pro app.
 - **Remote Control:** Use the **11-button remote** once a drill has been started via the app.
 - **Angle Adjustment:** Use the **angle adjustment knob** located on the bottom of the machine for height and trajectory control.
-

6. Drill Modes

Choose from several intelligent drill programs to sharpen your game:

- **Fixed Location:** Consistent targeting to one spot.
 - **Horizontal Oscillation:** Alternating side-to-side motion for lateral movement drills.
 - **Dink Mode:** Specialized low, soft ball delivery to simulate dinking rallies.
-

7. Maintenance & Care

- Wipe the machine with a soft, dry cloth after use.
 - Regularly inspect for debris or foreign objects in the launch area.
 - Store indoors in a cool, dry place.
 - Never expose the machine to rain or moisture.
-

8. Troubleshooting

Issue	Solution
Machine won't turn on	Ensure battery is charged and power switch is ON
Balls not launching	Check for jams or improper agitator attachment
Remote not responding	Start drill from app first, then use the remote
Inconsistent ball feed	Clean agitator area and use regulation pickleballs

9. Technical Specifications

Feature	Details
Weight	17 lbs
Capacity	45 pickleballs
Battery Life	5–8 hours per full charge
Remote	11-button (usable after app initiation)
Drill Modes	Fixed, Oscillation, Dink
Angle Control	Manual adjustment knob (bottom mounted)

10. Contact & Social Media

For technical support, replacement parts, or app assistance, contact us at:

 support@victorysportstechnologies.com

 Follow us on social media for tips, updates, and training content:

- **Instagram:** [@dinkanddroppro](#)
- **Facebook:** [Victory Sports Technologies](#)

 Remember to like and follow us to stay in the loop with the latest features and drills!